

# Board and Batten Installation Instructions

Figure 1


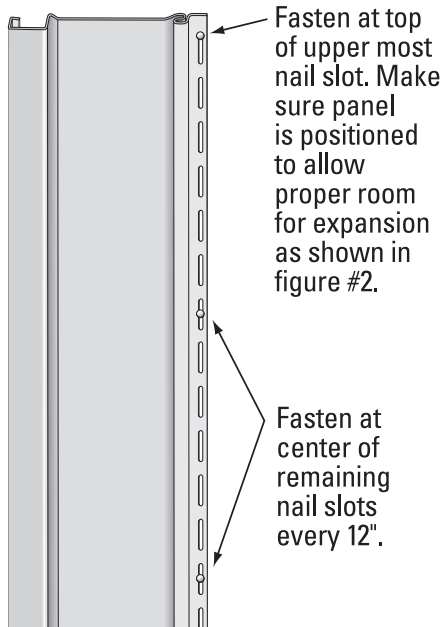


Figure 2



Also allow  $\frac{1}{4}$ " clearance at each channel around windows, doors, and other obstacles.

Figure 3

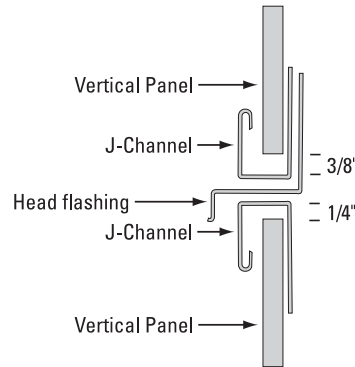

**DO NOT** nail tight against wall. Leave  $\frac{1}{32}$ " to  $\frac{1}{16}$ " clearance.