

# BASIC WINDOW TRIM & PLANK DETAILS

## TECHNICAL BULLETIN

### INSTALLATION OPTION 1

#### Using TWO-PIECE J-Trims

The following instructions demonstrate proper installation for window and door trim, using a typical design layout.

When installing trim around a door, follow instructions for jambs and head details only.



- 1 Ensure flashing & air/water barrier are completed to meet local building code (Figure 1).



Figure 1

- 2 Attach P11 back plates cut to 45° around the window. For the P11 sill and head of window, add P30 plank backer 2" from ends and 16" center (Figure 2).

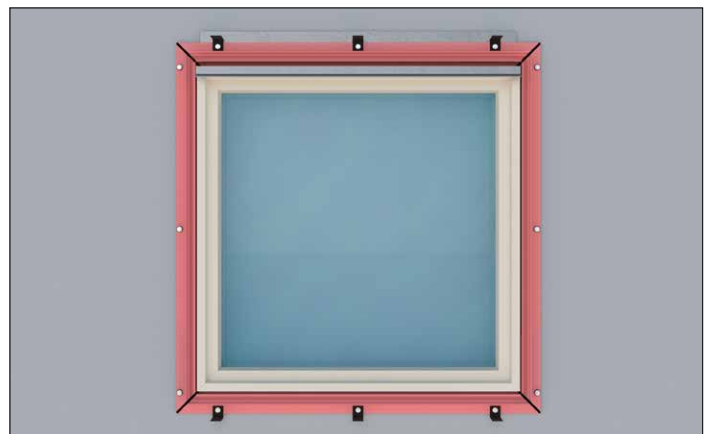


Figure 2

- 3 Notch P46V or P44V plank to go around the sill of window (Figure 3.1), ensuring a 1/8" gap is between the horizontal notched plank and horizontal P11 back plate (Figure 3.2).



Figure 3.1

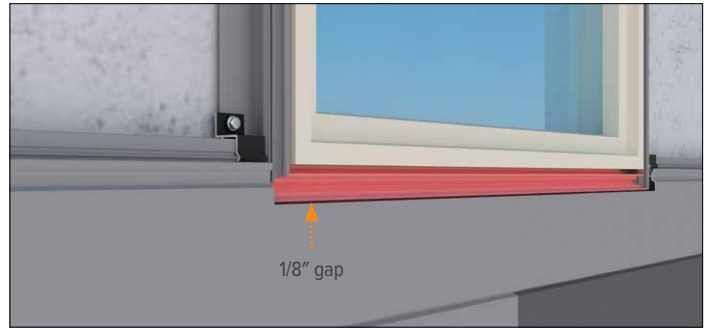


Figure 3.2

- 4 Install planks on either side of the jamb of the window, at head of window (Figure 4.1). Notch plank leaving 1/8" gap between the plank and the horizontal P11 back plate (Figure 4.2).

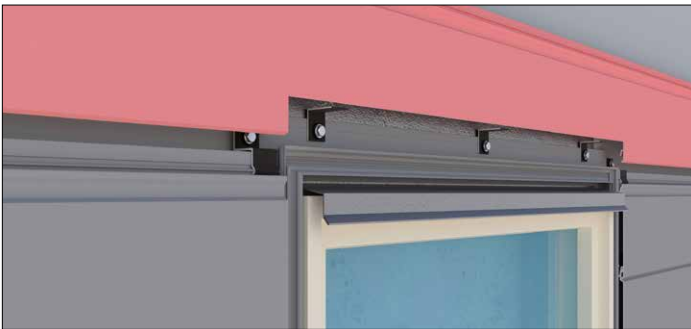


Figure 4.1



Figure 4.2



**IMPORTANT**

Make sure gap between the plank and vertical P11 back plate is following the expansion and contraction chart found on pg. 11 of the Installation Guide (Figure 4.2).

- 5 Measure and install P11 top caps cut to 45° around window (Figure 5.1 and 5.2).



Figure 5.1



Figure 5.2



Contact us for **Free Estimates & Samples**

1-877-973-8746 | [orderdesk@fastplank.com](mailto:orderdesk@fastplank.com) | [fastplank.com](http://fastplank.com)

