



NorthRidge
STONE



**Where Strength, Durability, and Beauty meet the
Smartest Stone Technology on the Market**




Discover the Vibrant World of NorthRidge Stone.

Transform your project with our ultimate solution for residential and commercial stonework.



Revolutionary Patented Attachment System

Faster, cleaner and more secure than mortar, clips or flanges.

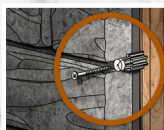

Cornering Systems That Wow

We've got the market cornered with corners that deliver an authentic fit and require less cuts. Elevate your project with our versatile, urn-key, corner system.

Pick a Color, Any Color.

Choose from our extensive stock colors or dive into our custom color creation service. Our colors permeate $\frac{3}{4}$ inch, ensuring lasting vibrancy.

If you have a need for a custom color choice, we hope you will consider our flex color option designs for special project requirements.




Ledges

1. Black 2. Charcoal 3. White 4. Sandstone 5. Earth



Black Beach

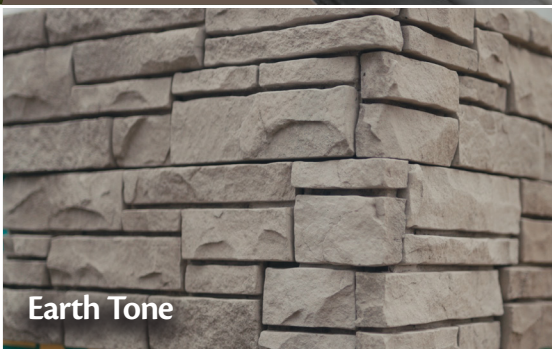

Earth Tone



Regal Canyon



Fundy Slate



Coastal Fog



White Pearl

Innovating for a timeless, durable, authentic look.

Our product has been designed from the ground-up to deliver quality, durability, and performance.

Northridge performance begins with the seamless integration of our panels and corners. Our commitment to bring you the most advanced stone siding system on the market drives us to deliver technical advantages that include material strength, extreme weather performance, color flexibility, and our innovative attachment system.



Our Integrated 'Overlap' System Provides a Superior Finished Look

Designed to Integrate Seamlessly for an Authentic Look and Feel.




Rock Solid - Loading Advantage

Our stone is tough. Independent labs show 300% strength advantage versus other stone products.

Water Protection Advantage

Worried about water? We have your project covered. Our unique, but simple overlap system means your stone acts like you expect your siding to. It holds out water under the harshest conditions.

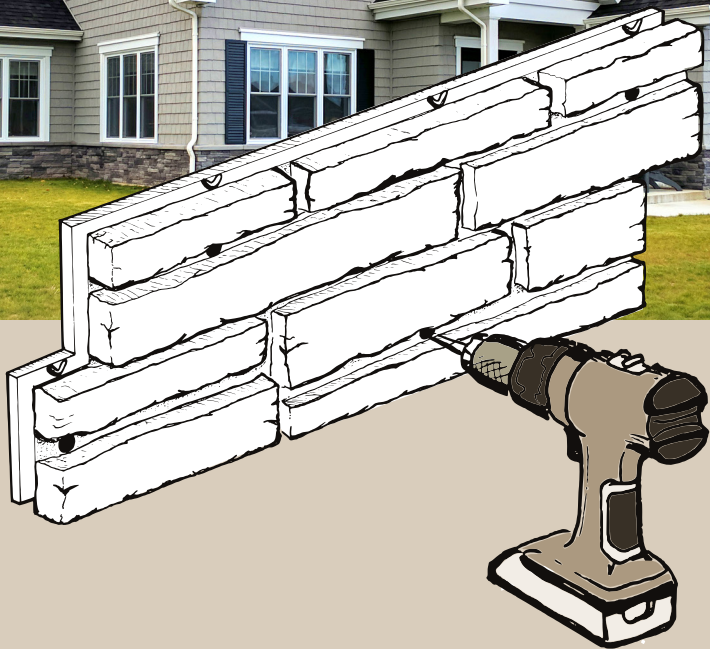

Northridge Stone panels arrive **ready to screw on**
with our **self-hiding, self sealing** insert system.

1




Inserts are
already in panel

2


Screw partially
driven in insert

3

Screw fully driven in inserts
(head hidden and sealed
automatically)

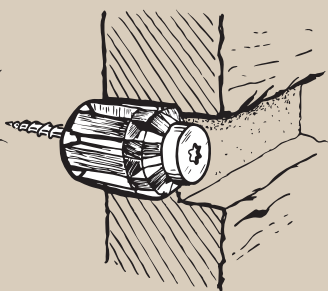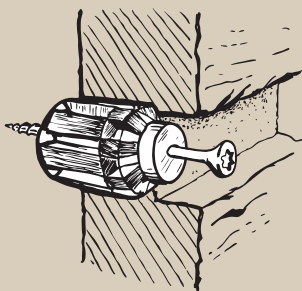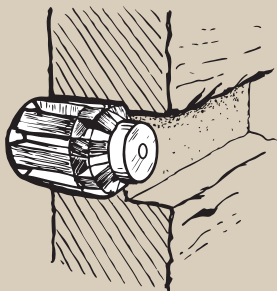


Component Guide

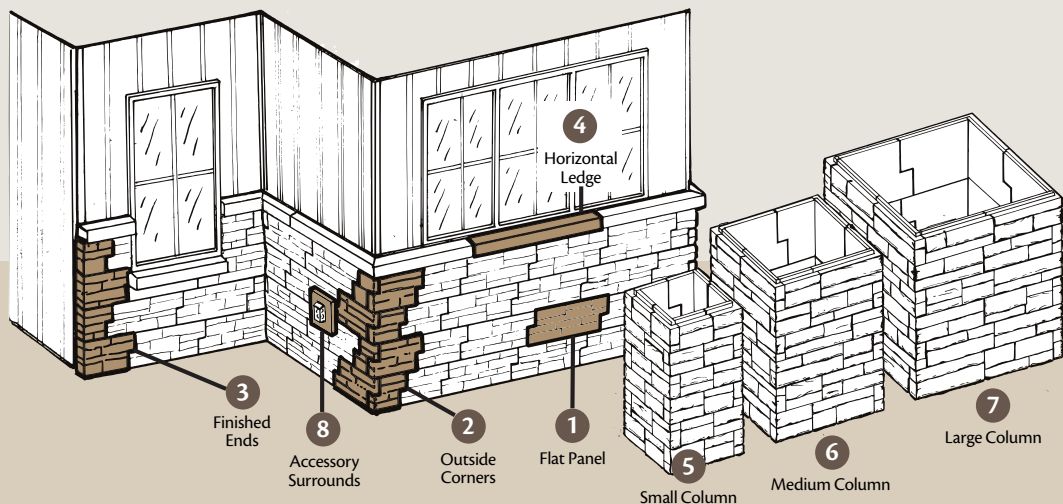

1 Panel 2-Pack


2.75 Square Feet of Flat Coverage

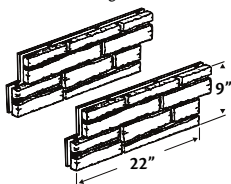

2 Pcs as shown

2 Corner Pack


1.5 Linear Feet of vertical Corner + 3.5 Sf of Flat Coverage

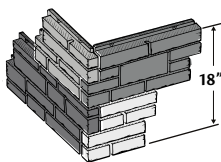

4 Pcs as shown

3 Finished End Pack


1.5 Lf of Left Finished Edge
1.5 Lf of Right Finished Edge
3.5 Sf of Flat Coverage

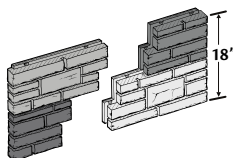

4 Pcs as shown


4 Ledge Pack

5.33 Linear feet of ledge

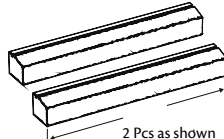

2 Pcs as shown


5 Small Column Pack

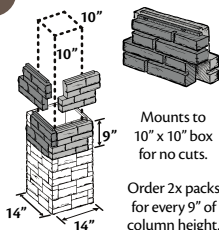

Mounts to 10" x 10" box for no cuts.

Order 2x packs for every 9" of column height.


6 Medium Corner Pack

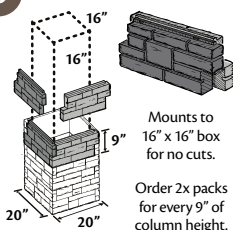

Mounts to 16" x 16" box for no cuts.

Order 2x packs for every 9" of column height.


7 Large Column Pack

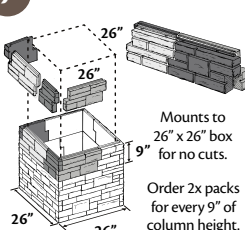

Mounts to 26" x 26" box for no cuts.

Order 2x packs for every 9" of column height.

8 Accessory/Plug Surrounds




Standard Screws - 2.25" x #7 - 100pcs (Installs 30sq. ft.)

- or -

Screws for Install over 1" insulating foam 3.0" x #7 - 100pcs (Installs 30sq. ft.)

Please contact for additional screw lengths

Optional Starter Strip




8 Linear ft.

Optional Install Track (Strapping/Rigid Foam)




Quick-Start Guide

- 1** Apply housewrap and Rainscreen
(10mm Recommended)

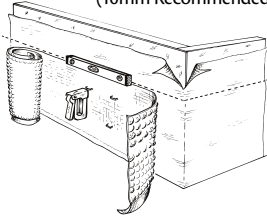


- 2** Layout horizontal
level lines every 9"
(First row 9.5")

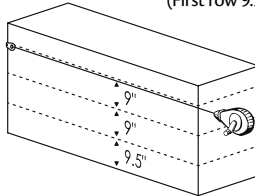

Note: Starter Strip may be utilized, but not required.


- 3** Unpack and install
corners on row

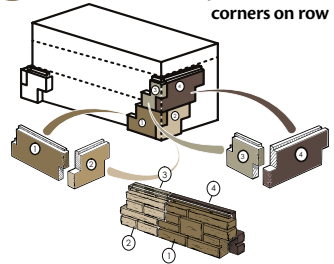


- a** Orient Flanges up
- b** Match natural stone faces on the outside corner
- c** Pair short pieces with long legs




- 4A** Unpack and install panels

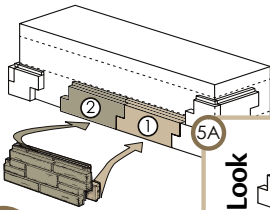

- 5** Cut final panel in row to length

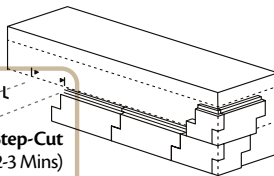


- 4B** Optional Track Install

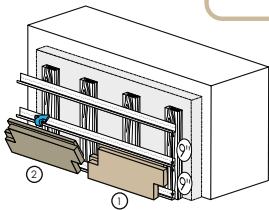

For installation over:


- Strapping over OSB
- Strapping over rigid foam
- Other insulation systems

Best Look

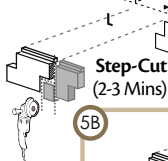



Step-Cut
(2-3 Mins)

Fastest

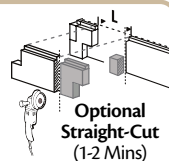

Optional
Straight-Cut
(1-2 Mins)

- 6** (Optional) Install horizontal ledge

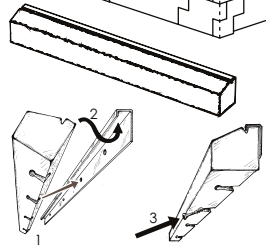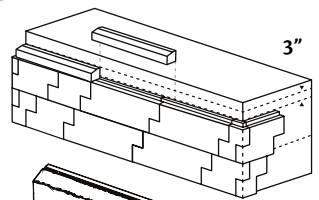

- 1) Install steel "J" bracket w/ #8 screws
- 2) Clip ledge piece into "J"
- 3) Drive #10 screws in underside key-sockets

Installation Help

For detailed installation instructions, videos, and FAQ, please scan this code:

Text: 506.777.3107

Email: install@northridgestone.com

Call: 877.467.1907





Build to last, build with us.




Rest assured you are covered with our **50 year warranty** on panelized stone veneer products. See details at

NorthRidgeStone.com

Exclusively at:



QUICK-LOC™
Fastening System



TRU-FIT™
Z Panels



STORM-DRI™
3X Rain Resist



ROC-MAX™
2X Strength



COLOR-THRU™
Technology



VERSA-FLEX™
Authentic Corners

